



Helping deliver an efficient and secure process

Eurotherm EPC3000 programmable controllers

Maintain high standards of production quality and help ease your cybersecurity worries



Life Is 

Eurotherm[®]

by **Schneider** Electric

eurotherm.co.uk/epc3000



Whatever your process, the EPC3000 range easily achieves the required stability, accuracy and repeatability



Life Is On

Eurotherm.
by Schneider Electric

Efficient, consistent production quality

EPC3000 programmable controllers deliver fast acting precision control. This helps to maximize yield at high quality with products that are built to last.

Reduce equipment costs and increase efficiency

- Easy to install, commission and replace
- Clear, user friendly operation, with scrolling help text
- Reduce downtime with powerful diagnostics
- Robust design for reliability in demanding environments and highly regulated industrial processes
- Three year standard warranty and free online support

Improve quality, reduce scrap and increase profits

- Precise repeatable control improves quality, increases yield and minimizes waste
- Improve OEE (Overall Equipment Effectiveness) with real-time indicators for efficient monitoring of the process
- Low total cost of ownership

Adaptable, scalable and digitized

- Adapt easily to changing needs with flexible software
- Instant upgrades available online, only pay for what you need now
- Industrial Internet of Things (IIoT) connectivity
- Versatile across a broad range of applications

World class certification

- Certified to Achilles® CRT Level 1 Cybersecurity
- Certified to international standards including CE, cUL, CCC (exempt), EAC (CUTR) pending
- Panel sealing to NEMA4X IP66
- Complies with control requirements of AMS2750E and CQI-9
- See datasheet for full list of certifications



“

“The performance of this controller is impressive and the certification for Ethernet robustness will help our cybersecurity strategy and give peace of mind for the future”

System integrator, India

”



React at the speed of change

Simple intuitive operation

Easy and quick to commission

Fast to replace and repair

Saves time and money by reducing equipment costs and downtime



Life Is On

Eurotherm.
by Schneider Electric

Improve product quality and lower production costs with precision control

Precision control begins with the measurement circuitry. The EPC3000 measurement system has excellent thermal stability and outstanding noise rejection for this class of controller. High sampling rate, automatically adapting to input type, delivers rapid, precise, repeatable control performance.


Proven over many years of use, the Eurotherm PID algorithm used in the EPC3000 delivers industry-leading response time to setpoint change or process disturbance. The speed of response means time and energy is not wasted waiting for operating temperature to be reached, while minimizing the overshoot and oscillations common in many PID implementations.

Repeatable control increases process yield and OEE while reducing scrap. High precision measurements allow tight process tolerances to be met easily. With a longer design life and three-year warranty as standard, the Eurotherm EPC3000 controller will help deliver high quality production batch after batch, year after year.

“ *This solution has simplified our process, and operation is so easy - the display presents only the parameters the operator wants to see, all the other parameters are locked away under password protection* ”


Leading aerospace manufacturer Quality Manager

”

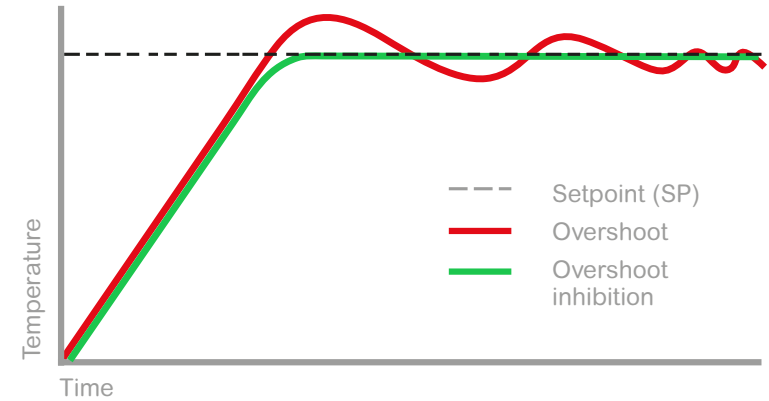

Eurotherm overshoot cut back capability

By automatically reducing power demand near the setpoint the Eurotherm cut back feature significantly minimizes overshoot which reduces waste and optimizes energy usage. This lowers the risk of parts not reaching operating temperature or overheating.

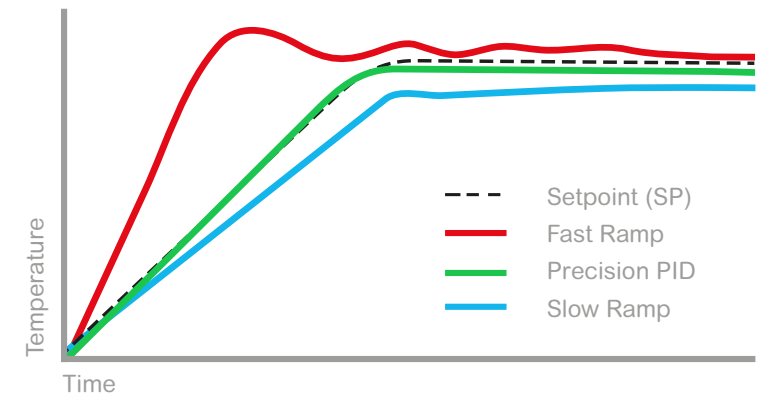

Eurotherm over ramp suppression achieves optimum ramp rate without affecting quality

Ramp rate controls the rate of change to setpoint, keeping the material within specified temperature limits, minimizing damage and distortion in the final product. A holdback “Guaranteed Soak” function enables material to reach the required temperature before the process advances.



The EPC3000 range allows you to optimize a wide spectrum of industrial processes



Life Is On

Eurotherm.
by Schneider Electric

Semi Conductors | Composites | Automotive | Aerospace Advanced Materials Processing | Laboratories | Food & Beverage Glass | Steam Applications | Plastics



Industrial furnaces • Autoclaves • Crystal growing • Atmosphere control • Composite materials processing
• Heat exchangers • Climatic chambers • Annealers • Dryers • Ovens • Pasteurizers • Sterilizers
Incubators • Boilers • Extruders • Blow molders • Injection molders • Trace heating • Bushing control
Disinfection processes • Batch processing • Melt pressure control • Industrial distillation

Life Is n

Eurotherm[®]
by **Schneider** Electric

Discover more about the benefits of the EPC3000 programmable controller range

eurotherm.co.uk/epc3000

Eurotherm Limited

Faraday Close, Durrington, Worthing
West Sussex BN13 3PL United Kingdom
Phone: +44 (0) 1903 268500

www.eurotherm.co.uk/epc3000

Document Number HA032951 - Issue 1 © 2017 Schneider Electric. All rights reserved.
All trademarks are owned by Schneider Electric Industries SAS or its affiliated companies.

[contact us](#)

Request a demo from your local sales team

